



3-452-886-11 (2)

Select one of the connections below 1



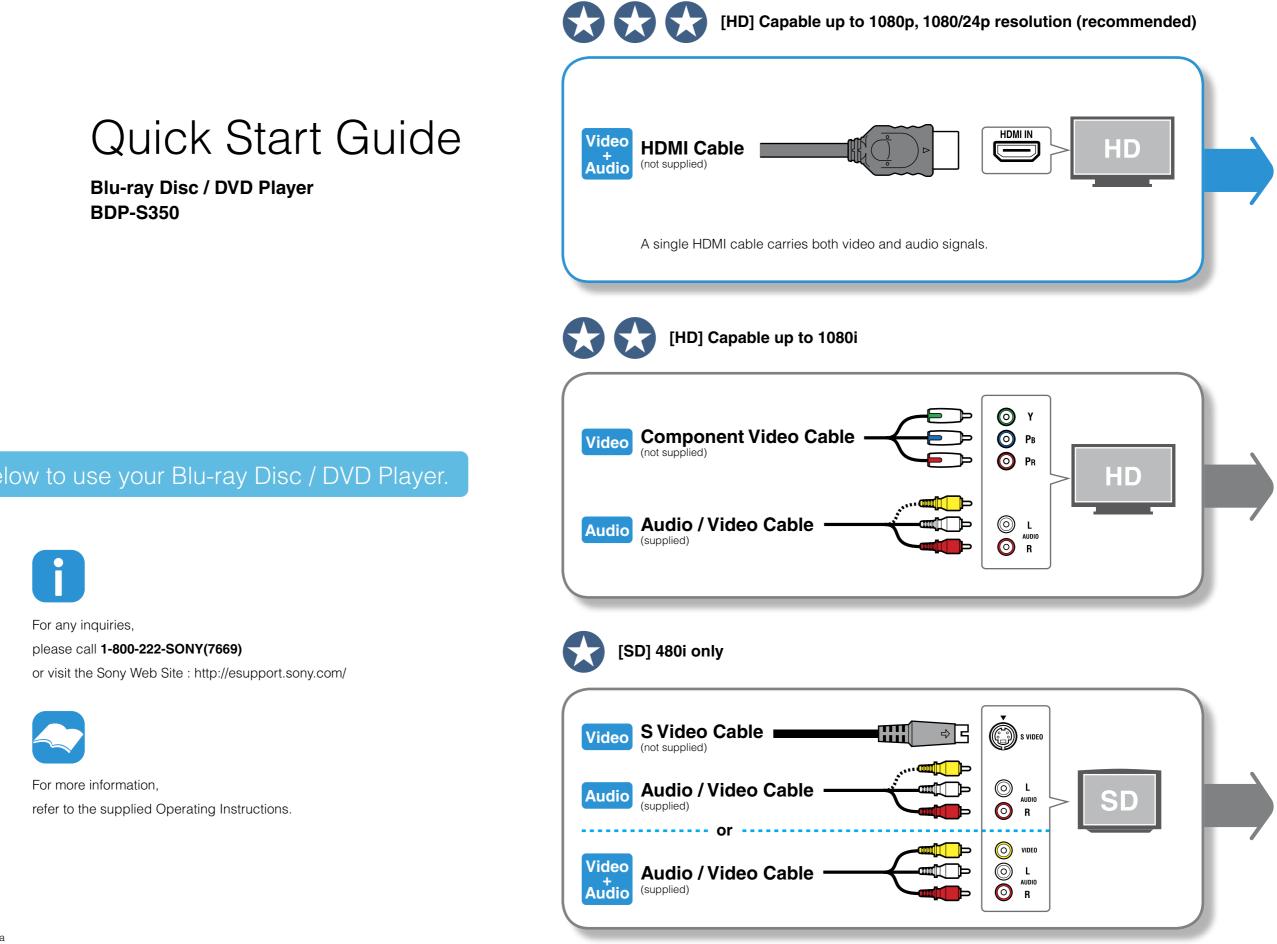



Follow the steps below to use your Blu-ray Disc / DVD Player.

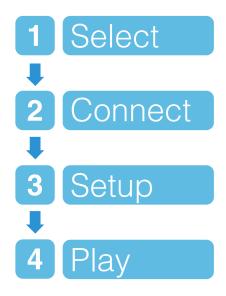


The number of stars (💦) indicates picture quality.

2 Connect

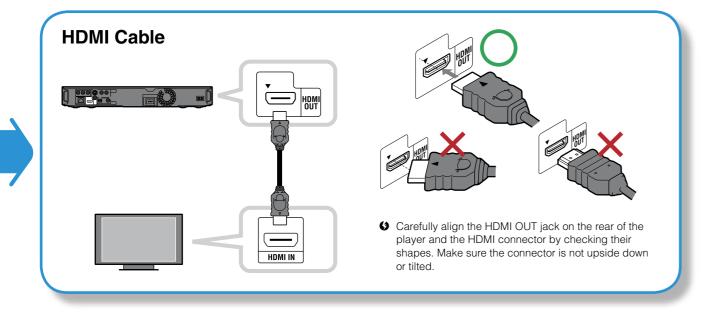


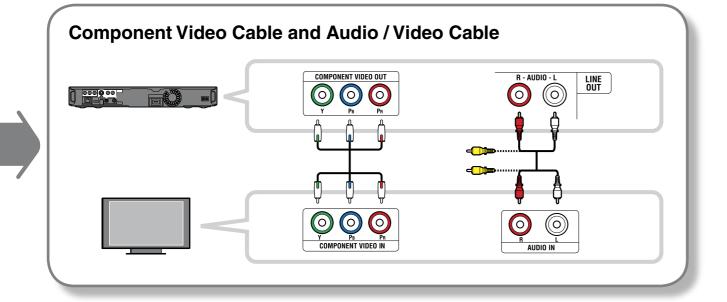

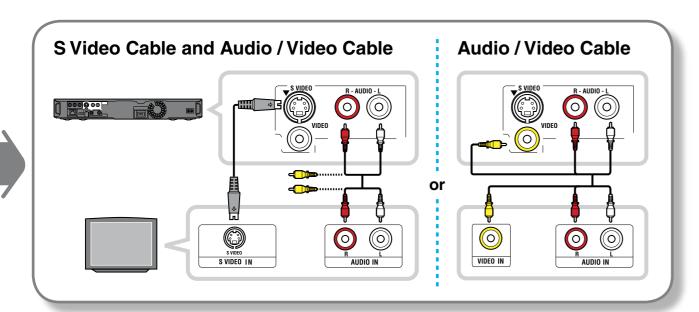


3 Setup

1 After all of the other connections are complete, connect the supplied AC power cord.

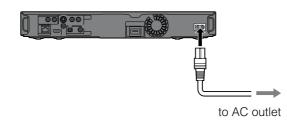

2 Insert two Size AA (R6) batteries.

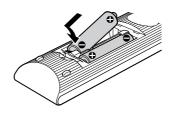 

- **3** Turn on your TV and switch the input selector.
- 4 Press I/⁽¹⁾ to turn on the player. Wait for a short while before the player turns on. The OSD language selection display appears.
- 5 Perform basic settings by following the onscreen instructions in "Easy Setup" using ←/↑/↓/→/ENTER.



When "Easy Setup" is complete, the player is ready. To shorten the startup time from standby mode, set "Standby Mode" to "Quick Start" in the "System Settings" setup. Refer as well to "Standby Mode" in the Operating Instructions.

To enjoy more BD functions, the following steps in the supplied Operating Instructions are necessary.

Step 3: Inserting the External MemoryStep 4: Connecting to the Network



1 Press \triangleq (open/close), and place a disc on the tray.



Playback side facing down

2 Press \triangleq (open/close) to close the disc tray.

When you insert a commercially available BD-ROM or DVD VIDEO, playback automatically starts depending on the disc.

Refer to "Playback" in the Operating Instructions for more details on playback, or when playback does not start automatically.

Useful Functions





TOP MENU

Shows the original menu provided with the disc.



HOME

Shows the XMB_{TM} (XrossMediaBar) menu that allows you to operate disc playback and setups.



POP UP / MENU Shows the pop-up menu, which can be displayed during playback.



OPTIONS Shows the optional menu available in each case.